
2700/2700W/G2-2700 Chair Rail

Important

- Acclimate materials 24 hrs before installation. Maintain temperature controlled environment after installation.
- Install in accordance with manufacturer's installation instructions. Failure to do so will void the warranty.

Installation tips

- 1. Cut covers up to 1/16" [1.6mm] longer to ensure a tight fit.
- 2. Lubricate blades when cutting aluminum to reduce burrs.

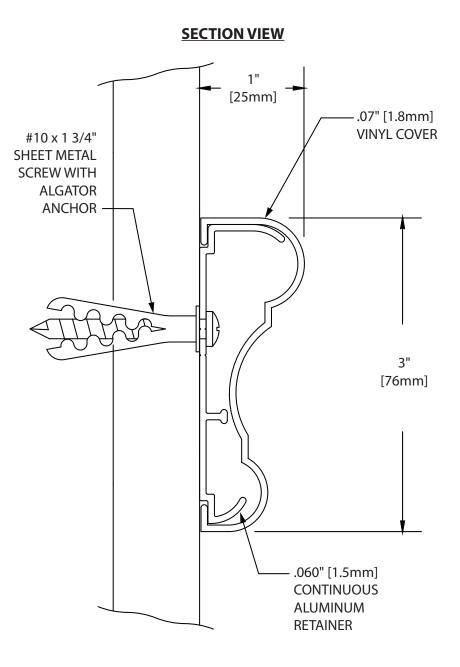

RECOMMENDED TOOLS

 
Safety Glasses, Tape Measure, Power Drill, Drill Bits - 1/4" masonry (concrete/concrete block), Power Miter Saw, 10" Blade with 60-80 Carbide Tipped Teeth

IPC® Door + Wall Protection inpro.com • 800.222.5556 • 262.679.9010 World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA Installation Hotline: 866.394.6776 IPC.369/REV.11




2700/2700W/G2-2700 Chair Rail

Components and Fasteners




2600A CONTINUOUS ALUMINUM RETAINER

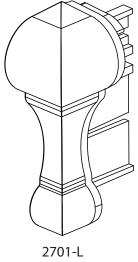

LEFT END CAP



2700V VINYL COVER

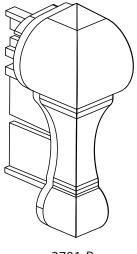


2701-R RIGHT END CAP

2703 INSIDE CORNER (NOT AVAILABLE IN WOODLAND FINISHES)

Wall Condition	Specified Fasteners	Inpro part #
Gypsum Wall	#10 1 3/4" Phillips pan head sheet metal screw with alligator anchor	HWK-WG/CR
Concrete/Concrete Block	#10 1 3/4" Phillips pan head sheet metal screw with alligator anchor	HWK-CC
Wood Stud/Gypsum Wall	#8 x 1 1/2" Phillips Indented Hex Washer Self-Drilling Screw #2PT ZP	HWK-CDW


IPC® Door + Wall Protection inpro.com • 800.222.5556 • 262.679.9010 World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA Installation Hotline: 866.394.6776



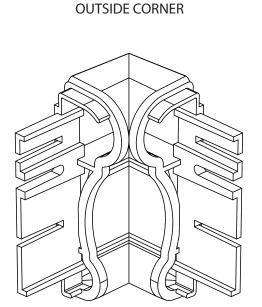

2702

2700/2700W/G2-2700 Chair Rail

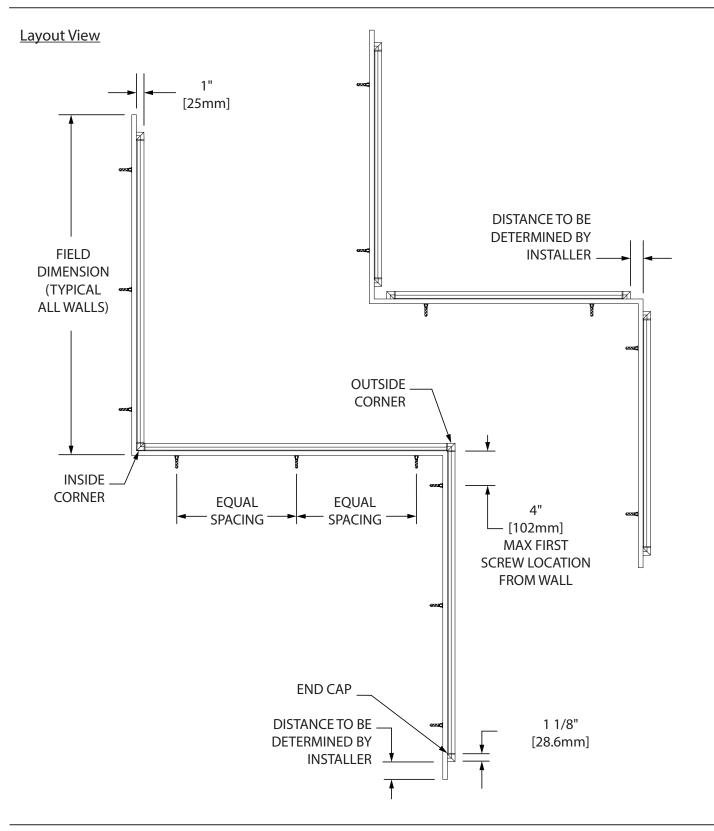


IPC® Door + Wall Protection inpro.com • 800.222.5556 • 262.679.9010 World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA Installation Hotline: 866.394.6776

inpro.

inpro.

2700/2700W/G2-2700 Chair Rail

Exploded Assembly View

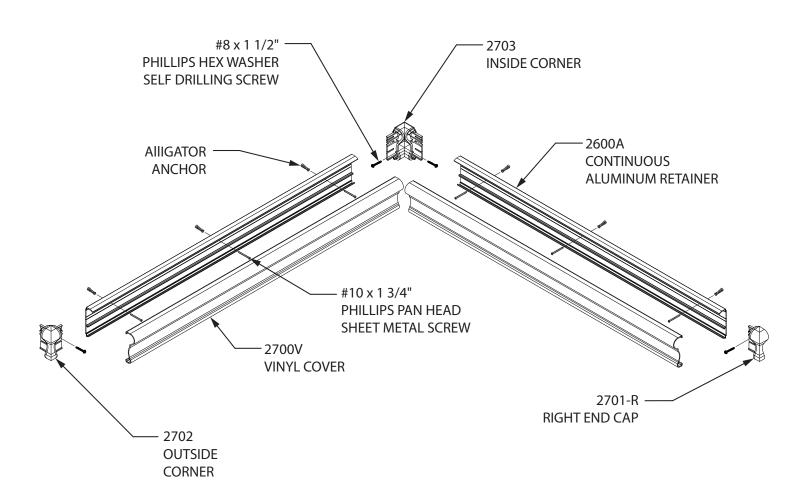


RETAINER BUTT JOINT

INSIDE CORNER, 90° (15/16" ALLOWANCE)


2700/2700W/G2-2700 Chair Rails

I FFT FND CAP

 (15/16" ALLOWANCE)



1. Cut aluminum retainer to desired length, leaving allowance for end caps, inside corners and outside corners. See Figure 1.

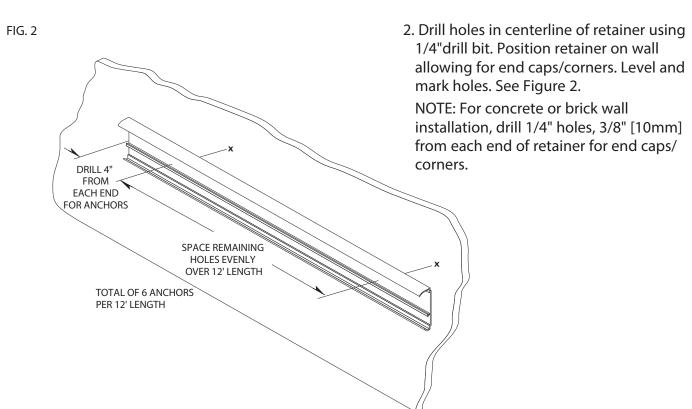

RIGHT END CAP

OUTSIDE CORNER, 90° (⁵/16" ALLOWANCE)

(15/16" ALLOWANCE)

inpro.


FIG. 1

CONTINUOUS

ALUMINUM RETAINER, .060'

2700/2700W/G2-2700 Chair Rails

FIG. 3

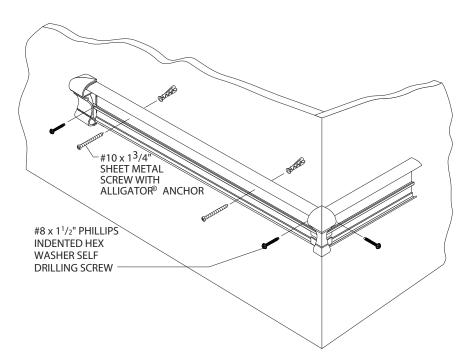


Please read all instructions before installing chair rail.

3. Drill marked holes on wall using a 1/4" drill bit and position Alligator anchors into holes. Mount retainer on wall and tighten screws to secure. Slide end caps and corners onto the retainer and secure, leaving a 1/16" [1.5mm] gap between returns/corners and retainer to allow for adjustment. See Figure 3.

NOTE: For concrete or brick wall installation, use $#10 \times 1^3/4$ " Phillips pan head screws to secure end caps and corners.

4. Cut the cover to length between end caps and/or corners. (Note: Trim factory edges square before installation). Position cover on retainer and adjust end caps and/or corners for a tight fit. Starting at one end, push cover onto retainer until it snaps into place. See Figure 4.

FIG.4

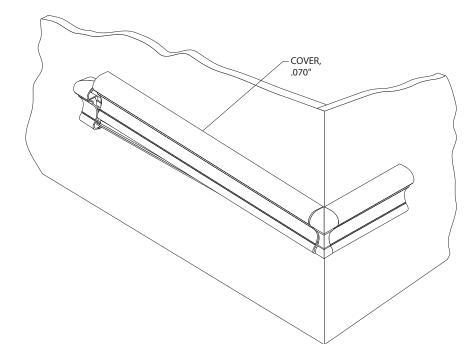

inpro.