


Installation Instructions

Contego™ Modular Sign System

WARNING: Failure to apply firm pressure may result in sign panel delamination from frame or wall.

Standard Wall Signs & Single Column Directory



1A. CONTEGO Modular Sign System VHB FOAM TAPE (See Figure 1)

- Mark the location of the sign on the wall.
- Check to ensure wall is clean and flat.
- Sign is applied using VHB double-sided foam tape. Remove liner from the double-sided foam tape.
- Position the sign on the wall making sure that the sign is level.
- Using the palm of the hand, apply pressure at the top and left and top right of the frame. Move hand down evenly along side rails to apply pressure the length of the rail. (See figure 2)

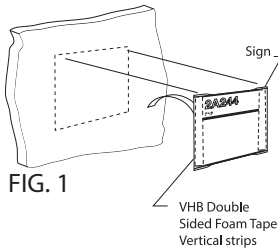


FIG. 1

Double Column Directory

1B. CONTEGO Modular Sign System Counter Sunk Screw Holes/PL Premium

- Remove the caps and all the inserts from both columns of the frame, set aside for later. (See Fig. 3; Ref 2A, Steps a-d)
- Check to ensure wall is clean and flat, then position the sign on the wall at its desired location. Level and mark holes. (See Fig. 4)
- Drill marked holes on wall using a 1/4" drill bit and position Alligator anchors into holes.
- On the back side of the directory, apply PL Premium, in a zig zag pattern, to the black backer, between the aluminum columns. (See Fig. 5).
- Align the directory to the holes on the wall, insert fasteners, level and tighten (See Fig. 6). The fasteners will hold the directory in place while the adhesive cures. (See Fig. 7) The inserts can be placed back in the frame along with the caps. Make sure to check alignment and proper position of the caps. (Ref Fig. 14).

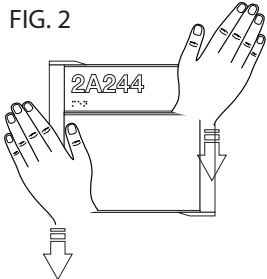


FIG. 2

FIG. 3

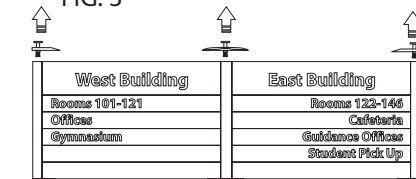


FIG. 4

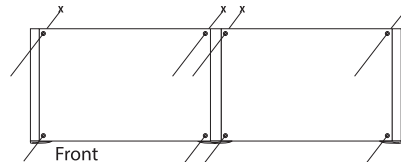


FIG. 5

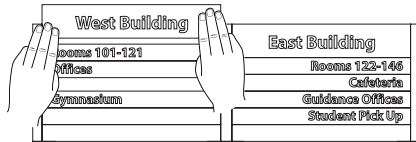
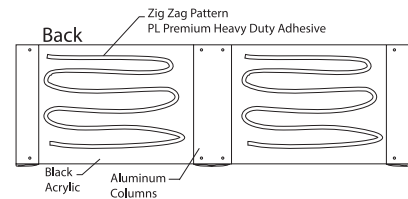


FIG. 7


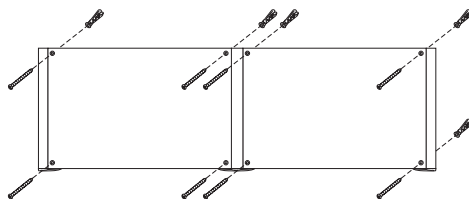


FIG. 6

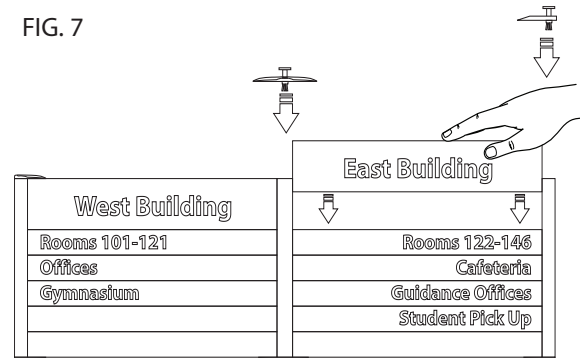

IPC.615/REV.1

Inprocorp.com • 800.222.5556 • 262.679.9010
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

SIGNSCAPE®
ARCHITECTURAL SIGNAGE
A DIVISION OF INPRO®


Installation Instructions

Contego™ Modular Sign System

WARNING: Failure to apply firm pressure may result in sign panel delamination from frame or wall.

2. REMOVING AND REPLACING CONTEGO INSERTS

- Using the provided tool (or a 1/8" FH screwdriver) position in the groove of the top cap and insert the head in between the rivot pin and body. (Fig 8)
- Pivot the handle down until the rivot pin pops up and disengages the locking mechanism in the rivot. Do the same for both the left and right top cap. (Fig 9)
- Lift both the cap and rivot pin from the frame. Keep close for reassembly. (Fig 10)
- Slide the inserts upward until they are fully removed for the frame. (Fig 11)
- Using your thumb, push the old sign to either the right or left until there is enough to grab the edge and remove. Then, slide your new sign into the bracket and align so there is no overhang on either side. (Fig 12)
- Gently slide the new signs and inserts back into the frame on the wall. Keep the inserts level to avoid them getting wedged in the tracks. (Fig 13)
- With the inserts in place, align the caps to their proper side, and check for correct rivet position (Fig 14); adjust as needed. Once in place, use your thumb or flat section of the tool head, and press down on the pin until you hear a light snap. (Fig 15) Repeat for both caps.

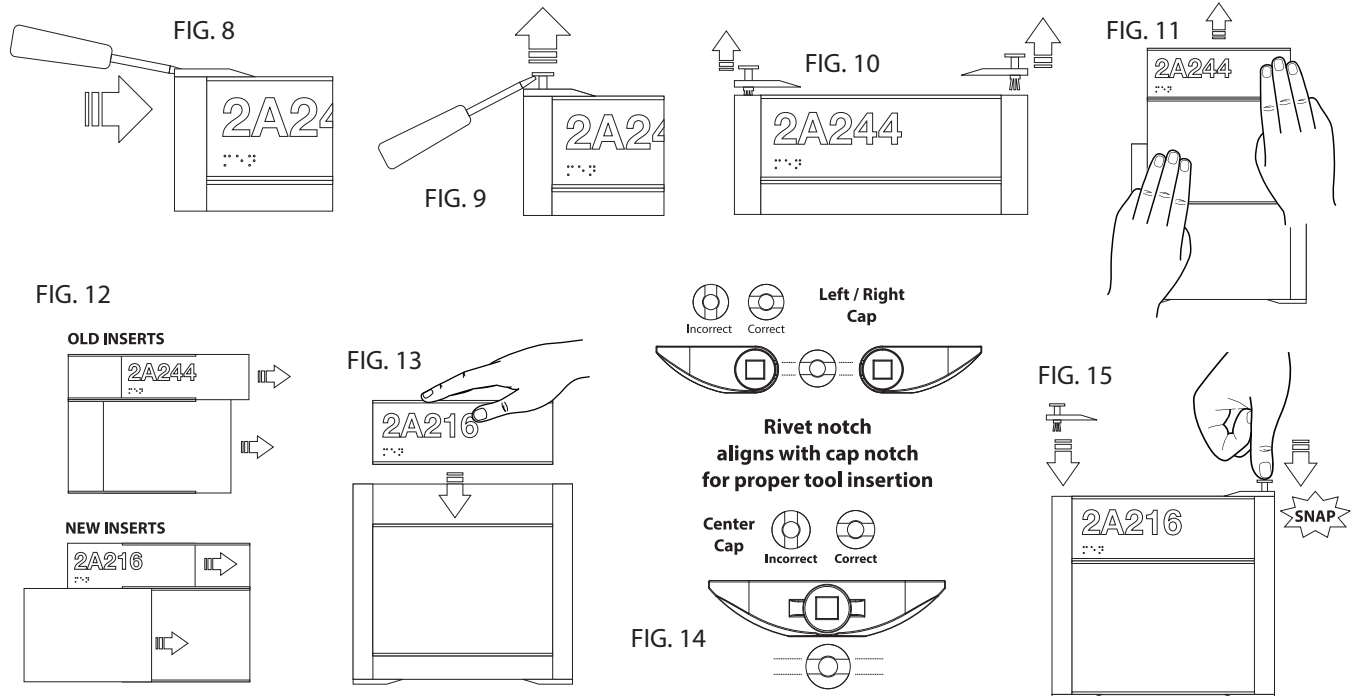

IPC.615/REV.1