

Installation Instructions

Curtain Tie Back

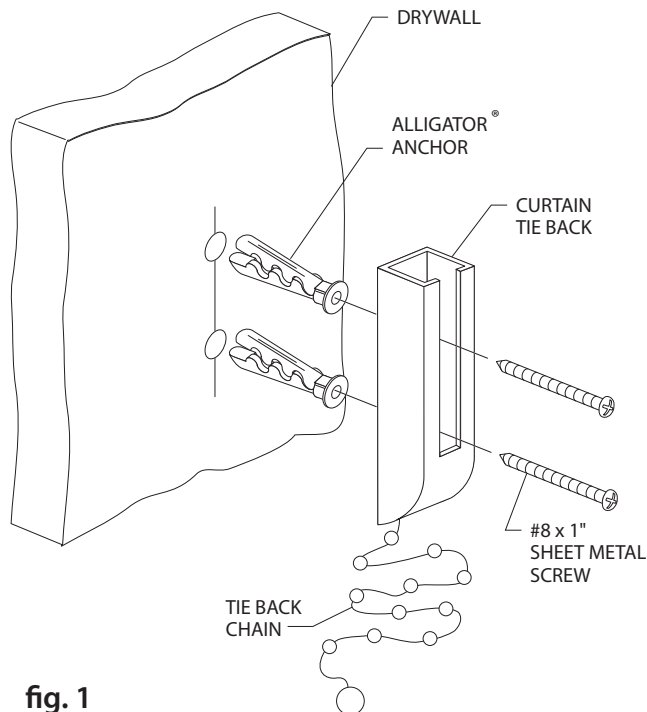


fig. 1

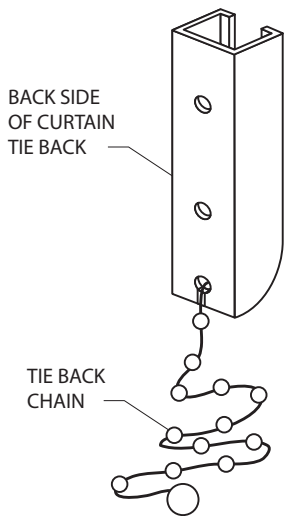


fig. 2

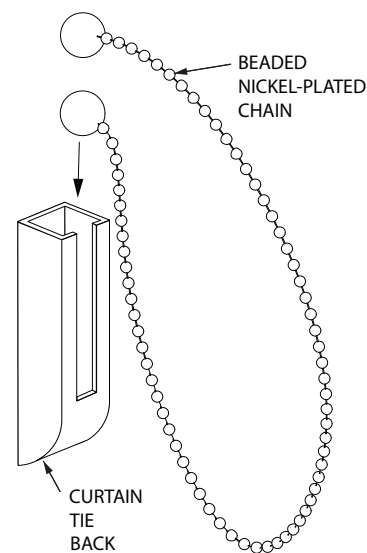


fig. 3

1. Draw a plumb, 2" long vertical line on the wall where you want to locate the Curtain Tie Back.
2. Use the Curtain Tie Back as a template and trace the mounting holes on the wall over the vertical line.
3. Drill 1/4" holes in the wall for the alligator anchors and push the anchors into the holes on the wall. (see figure 1)
4. Insert the small end bead of the beaded chain into the bottom hole on the back of the Curtain Tie Back. For curtains with less fabric cut the beaded chain to a shorter length. (see figure 2)
5. Line up Curtain Tie Back with alligator anchors in the wall. Position the curtain tie back on the wall while keeping the beaded chain inserted in the back of the Curtain Tie Back. Screw into the alligator anchors with the #8 x 1" sheet metal screws.
6. Slide the curtains to the wall by the Curtain Tie Back. Wrap the beaded chain around the curtains and insert the large ball into the top of the Curtain Tie Back.
7. If using the beaded nickel-plated chain, attach plastic curtain tie back to the wall. One end of beaded nickel-plated chain slides into the plastic component. The chain wraps around the curtain and the other end of chain then slides into the plastic component. (see figure 3)

IPC.601/REV.2

JUNIPER™ Commercial Window Treatments

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

inpro®