

# FastFill™

## Installation Addendum


**Use color coordinated caulk to fill in joints and seal seams between solid surface panels and to seal the perimeter around solid surface accessories.**

### BEFORE INSTALLATION:

- Install wall panels, trim, or accessories per Inpro's installation instructions
- Acclimate the caulk to the environmentally controlled installation area for 24 hours, prior to installation. This area requires a consistent temperature between 65°-80°F [18°-27°C] and a humidity level less than 80%.
- Clean all surfaces to ensure that they are free of dirt, dust, oil, wax, and other such substances.

### RECOMMENDED TOOLS:

- Caulk Finishing Tool
- Utility Knife
- Masking Tape
- Paper Towels/Rags
- Denatured Alcohol


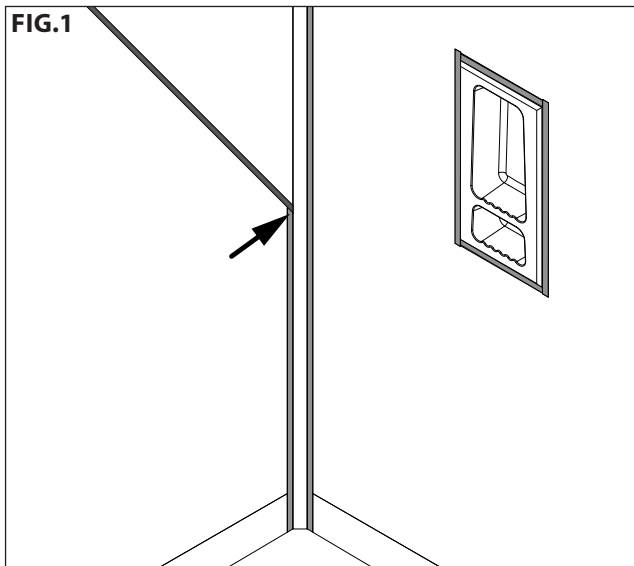


### FASTFILL INSTALLATION INSTRUCTIONS

1. Ensure all surfaces are clean, free of dust, oil, wax, or other such substances.
2. Apply masking tape to the seam or joint. *See Figure 1*
3. Apply 1/4" caulk bead to the seam or joint. *See Figure 2*

**Note:** Ensure FastFill has full contact with the edges of the seam.

4. Smooth caulk into the seam or joint with a caulk finishing tool or finger. *See Figure 3*

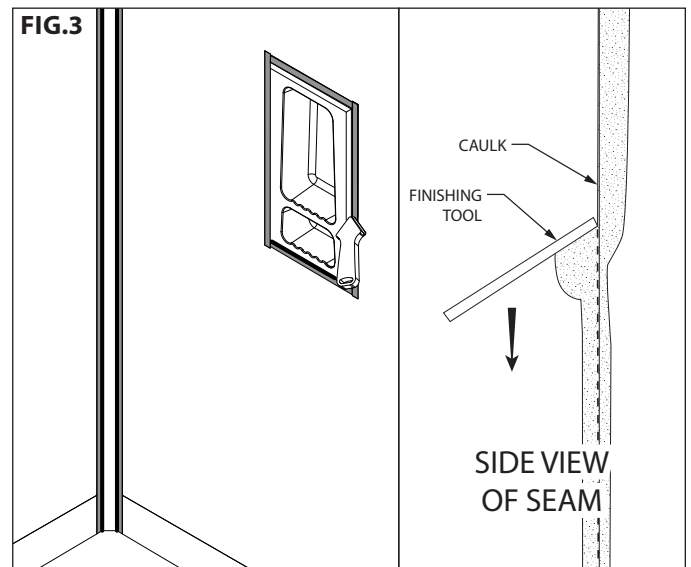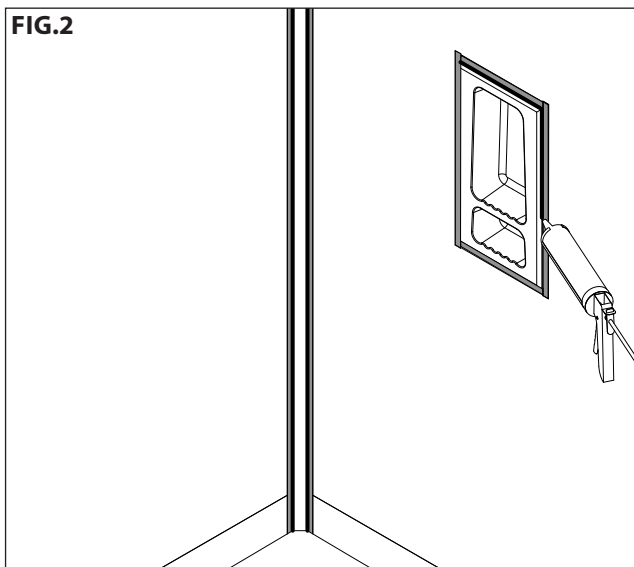

IPC.3272/REV.1

ENDURANT® Washroom Systems

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA


Installation Hotline: 866.394.6776

**inpro**®

# FastFill™

## Installation Addendum

---

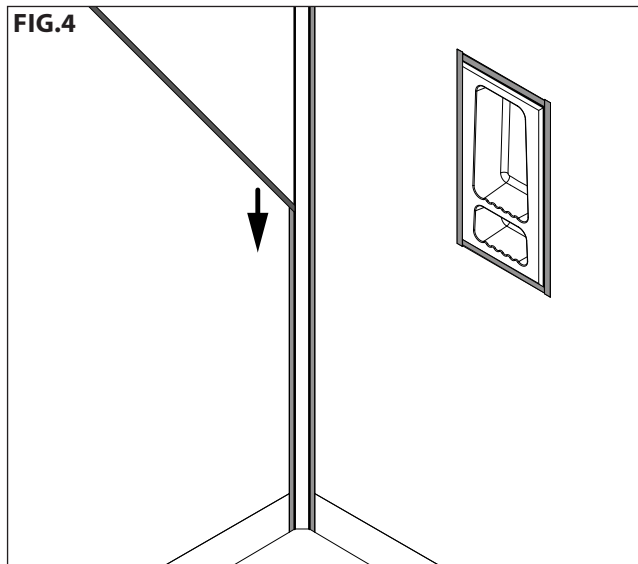

5. Remove the masking tape immediately after each joint is completed. *See Figure 4*
6. **IMPORTANT** - Clean up excess caulk with denatured alcohol before the caulk cures. *See Figure 5*

