

Ligature Resistant Drain Installation Addendum

for use with all Custom or Standard (non Trench) Receptors

FIG.1


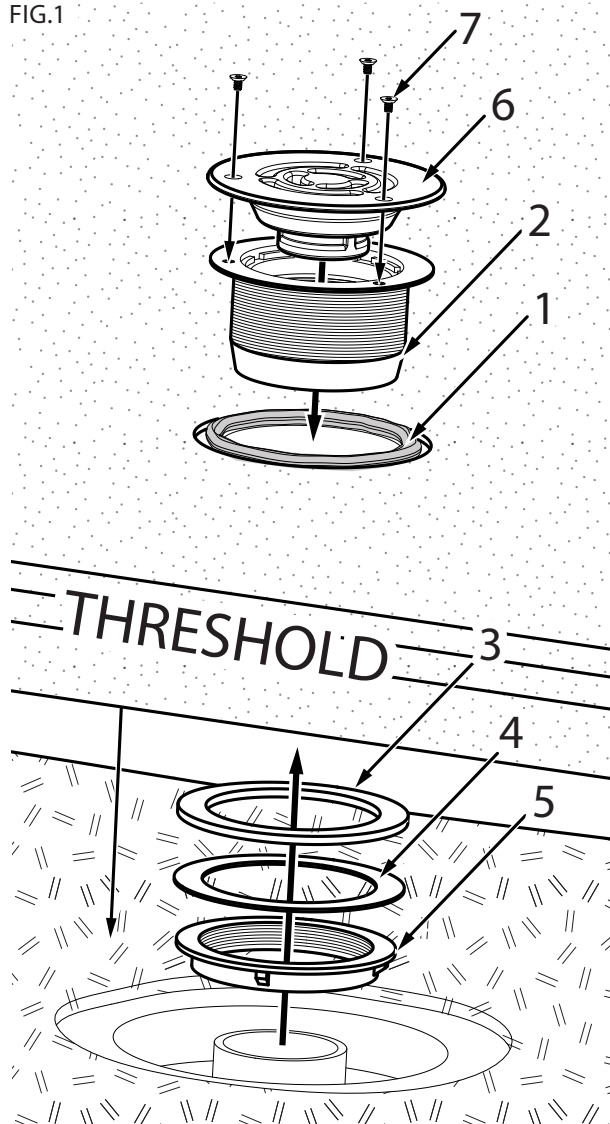


FIG.2

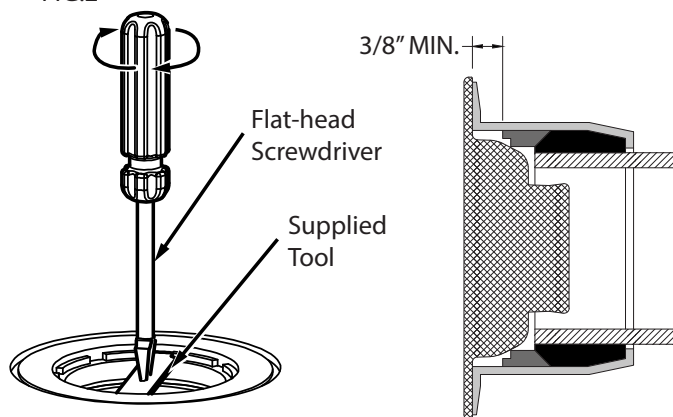

DRAIN INSTALLATION INSTRUCTIONS

1. Apply a bead of silicone sealant, to the top of the drain recess, to form a water tight seal. *See Figure 1 Item 1.*
2. Insert the drain body (*Figure 1 Item 2*) into the drain opening, apply light pressure to seat the drain body in the bead of silicone sealant.
3. Slide the rubber washer (*Figure 1 Item 3*) and fiber gasket (*Figure 1 Item 4*) onto the end of the drain body that is sticking out of the receptor base.
4. Thread the locking nut (*Figure 1 Item 5*) onto the end of the drain body, tighten the nut to secure the drain assembly to the receptor base.

Note:

- Do not over tighten the locking nut, this could crack the receptor base.
- Clean any excess silicone that squeezes out with denatured alcohol and white paper towel or clean rags.
- 5. Carefully lower the receptor over the 2" (5.08cm) Schedule 40 DWV pipe, and install per the receptor install instructions.

Note:

- If you **DO NOT** have a 2" (5.08cm) Schedule 40 DWV pipe, you will need a different rubber sleeve compression gasket for the drain assembly. For 2" no-hub cast iron pipe you will need gasket number LP-42157.
- 6. Using the supplied tool and a flat-head screwdriver, tighten the compression nut to tighten the compression sleeve onto the drain pipe. *See Figure 2.*

Note:

- Compression nut must be tightened down a minimum of 3/8", from the drain body face, in order for the strainer to fit.
- 7. Center the strainer on the drain body and align the screw holes in the strainer with the inserts in the drain body. Secure the strainer with the provided 6-32 x 1/4" tamper resistant flat head machine screws. *See Figure 1 Items 6 & 7.*

Disclaimer: While this product is designed for behavioral health applications, it does not guarantee patient safety. Supervision of persons at risk of suicide is recommended.

IPC.3222/REV.1

ENDURANT® Washroom Systems

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

inpro®